



**NTS**

***PFC-4000***

**OPERATING INSTRUCTIONS:**

ENSURE THE DRAIN IS PLUMBED INTO A SUITABLE WASTE CONTAINER.  
MAINTAIN A MINIMUM OF FOUR INCHES AROUND CONDENSER FOR VENTILATION.  
DEFROST AND DRAIN THE CONDENSER AFTER EACH RUN.  
ALL FUNCTIONS ARE CONTROLLED THROUGH THE EVAPORATOR SOFTWARE.