

JD-188

WIRELESS

## ALARM SYSTEM

DOORS • WINDOWS • CABINETS & MORE!

### Instructions:

1. Remove the battery compartment cover and insert the required 2 "AAA" batteries according to the polarity shown.
2. Place the cover in place.
3. Peel the backing of the Alarm Unit and place on the edge of the recessed portion of the entrance with the ON/OFF switch side away from the edge.
4. Peel the backing of the Magnetic Sensor and place it on the edge of the opposite side next to the Alarm Unit.
5. Turn the unit to On when alarm is armed. Turn the unit to Off when not in use.
6. If the unit is not used for a long period of time, remove batteries from the compartment by picking the life of the batteries.

### BATTERY WARNING:

- Do not mix alkaline, standard (zinc-chloride) and rechargeable batteries (nickel hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Exhausted batteries are to be removed.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.

KEEP THIS PACKAGE FOR REFERENCE SINCE IT CONTAINS IMPORTANT INFORMATION.



MADE IN CHINA